


VAG Group new 1.4 1.6 16v ME7.5.20

Pin out:

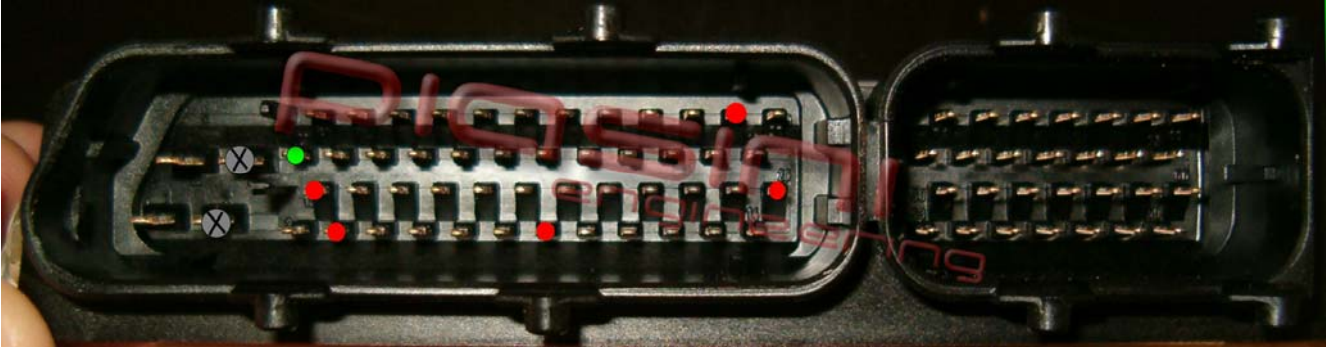

PIN 4 – 9 – 15 – 26 – 51 = **+12V Fisso**
PIN 2 – 28 = - (Massa - Ground)
PIN 29 = **K-LINE**

Panoramic view:



Bootstrap pin & enable pin:



For the enable pin you have to connect a resistor (680Ω) between the pins like in the picture.

The Pin 5 is the Bootstrap's Pin and you have to connect it to Serial Suite's blue banana through the appropriate cable and the metal point. Holding connect the metal point for some second and during the connection time it will be able the read and write of ECU.