


Connect as below:

Serial Suite:


Red
Black
Green

ECU Plug:

2 Pins Red (Power Supply +12 Volt)
1 Pins Black (Ground)
1 Pin Green (K Line)

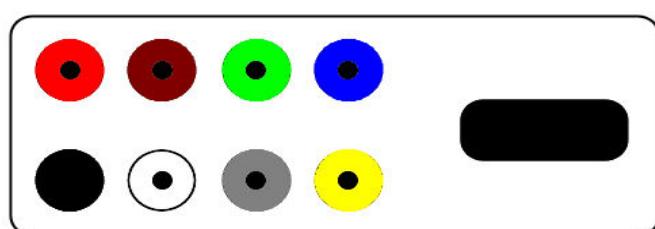

Bootstrap's Pin:

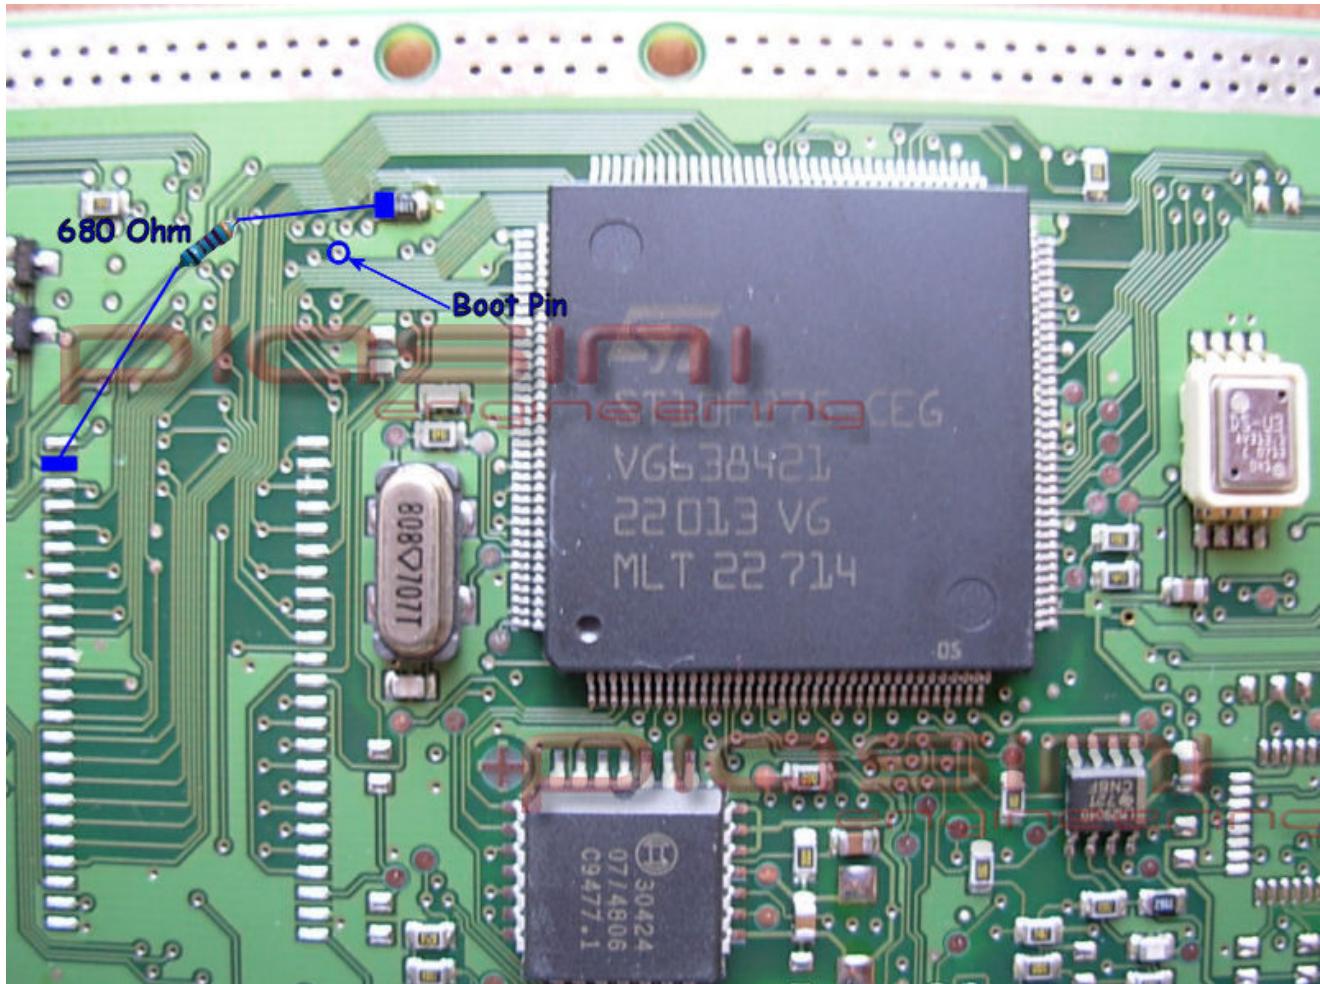

Soldering the resistor (680 Ohm) like in the picture then you can continue to the bootstrap procedure.

The boot pin you have to connect it to Serial Suite's blue banana through the appropriate cable and the metal point. Holding connect the metal point for some second until you see on the serial suite window "READY", then remove the metal point and you will be able the READ and WRITE of Ecu.